


Angle Broom Valve Adjustment Procedure

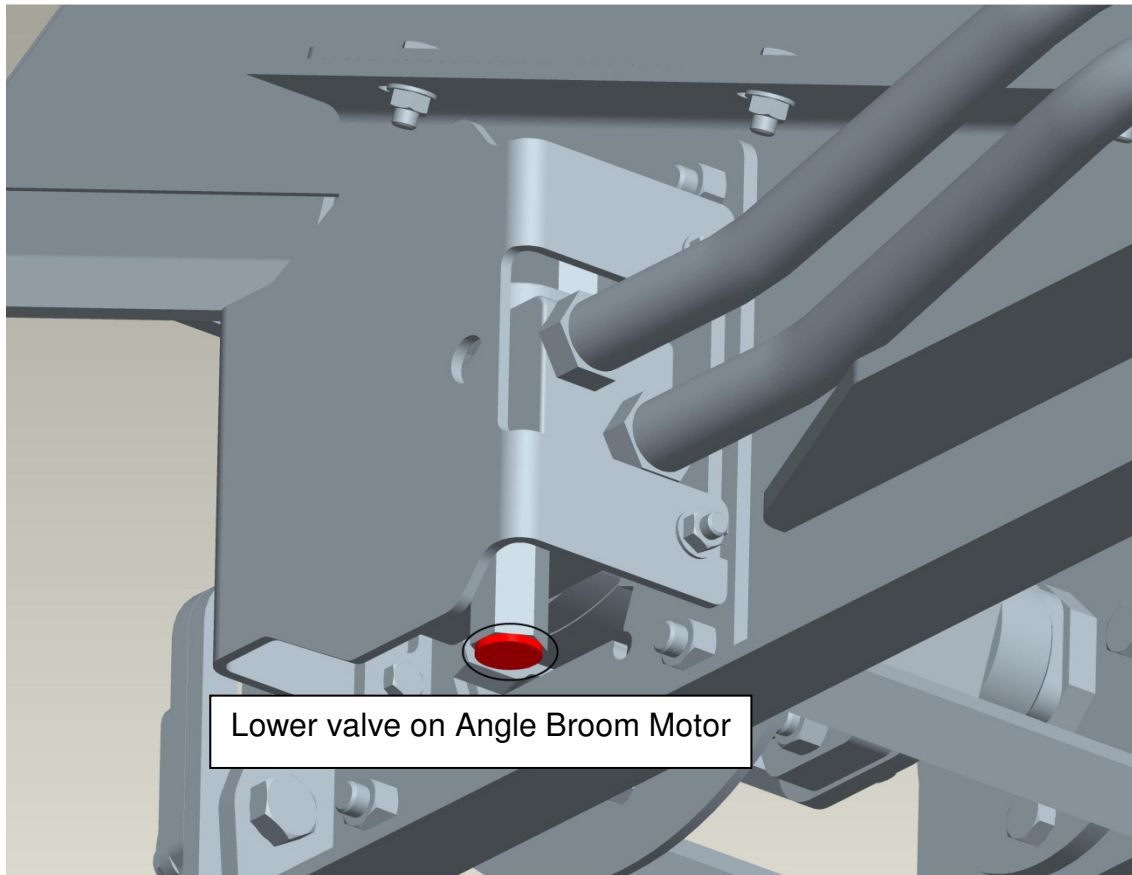

The lower valve on the angle broom can be adjusted to increase the power the broom has sweeping in the reverse direction (sweeping toward the operator).

Remove the cap (the cap is the thin cylinder at the outermost portion of the valve, shown in red and circled in the above picture) on the valve with a pliers or vice grip. There will be a small amount of oil that drips from the valve body after the cap is removed so you may want to put an oil pan below the valve. Using a 1/4" allen wrench, turn the valve in (clockwise) 2 turns to start with. Reinstall cap and test run the broom. If more power is desired, continue to make the adjustment 1 turn at a time.

At the time of installation of the motor on the angle broom, this valve is turned out 5 turns. When making this adjustment, **do not turn the valve in more than 5 turns total.**